




-PARZOOM 3x15W-



MODE D'EMPLOI – USER MANUAL

1- Instructions de sécurité




WARNING

Avant d'utiliser votre matériel, nous vous recommandons de lire l'ensemble des instructions de ce manuel.


- Conservez ce manuel pour une future consultation. Si vous revendez cet appareil, veillez à transmettre également ce manuel d'utilisation au nouvel acquéreur.
- Déballez entièrement l'appareil ainsi que tous ses accessoires. Vérifiez qu'il n'y a aucun dommage et que l'appareil se trouve en parfait état.
- Il est important d'utiliser le câble d'alimentation secteur fourni (câble avec terre).
- Toujours débrancher l'appareil avant une intervention technique ou avant son entretien.
- Température ambiante maximum pour un fonctionnement optimal de l'appareil : 40°C. Ne pas utiliser l'appareil si la température ambiante dépasse cette valeur.
- En cas de problème de fonctionnement, arrêtez immédiatement l'appareil. Ne pas essayer de le réparer soi-même. Contactez votre revendeur ou faites appel à un réparateur spécialisé et agréé. Il n'y a aucune pièce remplaçable par l'utilisateur.
- Ne pas brancher cet appareil sur un bloc de puissance variable type " Dimmer pack"
- Afin de réduire et d'éviter tout risque d'électrocution ou d'incendie, ne pas utiliser cet appareil dans un milieu humide ou sous la pluie.
- Ne pas regarder directement le faisceau lumineux.
- Cet appareil doit être installé avec un crochet solide et de dimension adéquate au poids supporté. L'appareil doit être vissé au crochet et serré convenablement afin d'éviter toute chute due aux vibrations produites par la machine en fonctionnement. L'accroche de l'appareil doit être sécurisée par une élingue de sécurité. Assurez-vous également que la structure (ou point d'accroche) peut supporter au moins 10X le poids de l'appareil accroché.
- L'appareil doit être installé par une personne qualifiée et doit être placé hors de portée du public.

2-Présentation du **PARZOOM 3x15W** :

Face arrière :

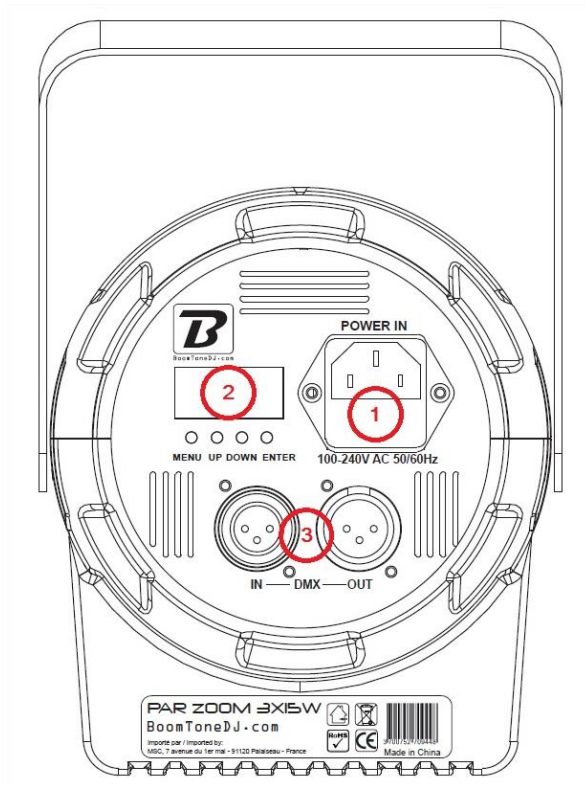

- 1) Connecteur pour l'alimentation électrique
- 2) Panneau de contrôle
- 3) Connecteurs d'entrée et sortie DMX

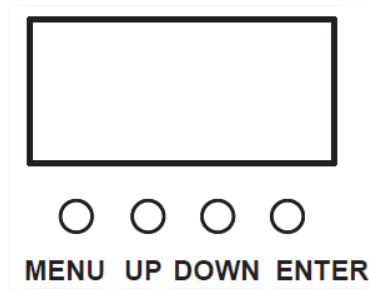

Boutons :

1. Menu : Pour accéder aux fonctions. Permet également de revenir en arrière dans la navigation.
2. UP : Navigation dans les menus vers le haut
3. DOWN : Navigation dans les menus vers le bas
4. ENTER : Pour la validation et accès au menu

Note:

(1) Si aucun bouton n'est utilisé, l'afficheur s'éteindra automatiquement après 10 secondes. Appuyez sur n'importe quel bouton pour le réactiver.

(2) Les paramètres sélectionnés sont automatiquement enregistrés après 2 secondes.

3- Caractéristiques techniques

- Alimentation : AC100-240V 50/60Hz
- Sources lumineuses: 3 LED de 15W QUAD RGBW
- 4 modes de fonctionnement : DMX, Automatique, Détection musicale, Manuel
- Zoom motorisé
- Angle du faisceau : 6.5°-60° degrés
- Canaux DMX: 8 ou 12 canaux
- Menu à LED pour naviguer dans les paramètres
- Norme de protection : IP20
- Consommation max : 50W
- Dimensions du carton: L 160 × l 140 × H140mm
- Poids brut: 3,5 kg
- Poids net : 3 kg

Ce projecteur intelligent respecte les normes européenne en vigueur : EN 2014/30/EU, EN 2011/65/EU, EN 2014/35/EU.

4-Modes de Fonctionnement

Menu :

Addr	001-512	Adresse DMX
ChAn	8	Mode 8 canaux
	12	Mode 12 canaux
Mode	Dmx	Mode DMX
	Fast	Mode rapide
	Slow	Mode lent
	Soun	Mode Musical
MAnL	rED	Couleur rouge
	GrEE	Couleur verte
	BLUE	Couleur Bleue
	Whit	Couleur blanche
	zoom	Zoom
Sens	SE0-SE99	Sensibilité du micro
bALA	rED	Couleur rouge
	GrEE	Couleur verte
	BLUE	Couleur Bleue
	Whit	Couleur blanche
DEFA	YES	Param. Par défaut
REST	YES	Reset

A. Utilisation en mode AUTO ou SON avec fonction Maître/Esclave.

En MODE Maître /Esclave , le 1er **Parzoom 3x15W** commande les suivants. Ce mode est très pratique lorsqu'il vous faut faire une installation rapide avec un résultat immédiat. Les appareils suivants doivent être sélectionnés en « **A001** ».

B. Mode DMX

Ce mode permet de contrôler votre **Parzoom 3x15W** avec un contrôleur DMX. Il faut « adresser » chaque appareil de 1 à 512.

Appuyez sur **MENU** jusqu'à visualiser « **Addr** » puis **A001** , appuyez sur **ENTER** , puis avec les touches **DOWN** et **UP** , sélectionnez l'adresse DMX désirée . Appuyez sur **ENTER** pour valider cette valeur.


Protocole DMX 12 canaux:

Canal	Fonction	Description
1	Dimmer	0-255 intensité lumineuse : 0-100%
2	Strobe	1-255; Strobe, de lent à rapide
3	Zoom	0-255 : ajustement du Zoom
4	R Dimmer	0-255; 0-100% intensité lumineuse rouge
5	G Dimmer	0-255; 0-100% intensité lumineuse verte
6	B Dimmer	0-255; 0-100% intensité lumineuse bleue
7	W Dimmer	0-255; 0-100% intensité lumineuse blanche
8	Couleurs Auto	0-127, Mode auto
		128-160, Changement de couleurs auto rapide
		161-200, Changement graduel 1
		201-255, Changement graduel 2
9	Vitesse	Vitesse de défilement des couleurs
10	Built-in effect	0-10, Mode effets
		11-120, Mode effets rapide
		121-244, Mode effets lent
		245-255, Mode son
11	Built-in effect speed set	Ajustement de la vitesse des effets
12	Reset	150-200; Redémarrage

Protocole DMX 8 canaux:

Canal	Fonction	Description
1	Dimmer	0-255 intensité lumineuse : 0-100%
2	Strobe	1-255; Strobe, de lent à rapide
3	Zoom	0-255 : ajustement du Zoom
4	R Dimmer	0-255; 0-100% intensité lumineuse rouge
5	G Dimmer	0-255; 0-100% intensité lumineuse verte
6	B Dimmer	0-255; 0-100% intensité lumineuse bleue
7	W Dimmer	0-255; 0-100% intensité lumineuse blanche
8	Reset	150-200 Redémarrage

5. Mode DMX (Connexion DMX)

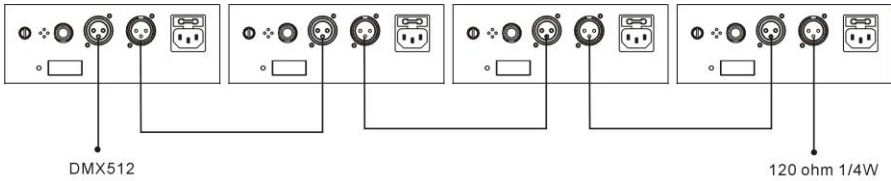

Termination reduces signal errors and to avoid signal transmission problems and interference. It is always advisable to connect a DMX terminal.
(Resistance 120 ohm 1/4W between pin2 (DMX-) and pin3 (DMX+) of the last fixture.



- Si vous utilisez un contrôleur équipé d'une sortie DMX en XLR 5 points, vous devez vous procurer un adaptateur XLR 5 points/3 points.
- Sur le dernier appareil de la chaîne DMX, il est conseillé d'utiliser un « bouchon DMX ». (une résistance de 120 Ohms 1/4W entre le pin 2(DMX-) et le pin 3(DMX+) placée dans un connecteur DMX mâle).
- Connectez " à la chaîne" les appareils les uns après les autres : Sortie DMX vers Entrée DMX de l'appareil suivant. Le câble DMX ne doit JAMAIS être un câble en "Y". La liaison DMX-512 transporte un signal à haute vitesse. Les câbles utilisés pour cette liaison doivent être de bonne qualité et en bon état.
- Chaque appareil doit avoir une adresse DMX bien précise pour qu'il puisse être contrôlé par le contrôleur DMX. (voir tableau ci-dessus).

6- Dépannage

Voici quelques suggestions si vous rencontrez des problèmes avec votre appareil **Parzoom 3x15W**.

- **L'appareil ne fonctionne pas du tout.**
 - Vérifiez le cordon d'alimentation et le fusible.
 - Assurez-vous que votre prise soit bien alimentée.

- **L'appareil ne répond pas ou pas correctement aux commandes DMX.**
 - Vérifiez vos câbles DMX
 - Vérifiez votre adressage DMX
 - Essayez un autre contrôleur DMX
 - Vérifiez que vos câbles DMX ne passent pas à proximité de câbles haute tension, ce qui pourrait créer des interférences.

- **Ne réagit pas au son**
 - Vérifiez le mode de fonctionnement choisi
 - Vérifiez qu'il n'y a pas de câble DMX branché sur DMX IN
 - Tapez directement sur le microphone pour tester sa réactivité.

7- Entretien

Un nettoyage extérieur de l'appareil doit être fait régulièrement. Les lentilles doivent être nettoyées pour une luminosité optimum. Si l'appareil est installé dans un environnement poussiéreux ou avec de la fumée cet entretien régulier est très important. Il est possible qu'un nettoyage des optiques par l'intérieur soit également nécessaire. Débranchez l'appareil avant toute intervention !

- Utilisez un chiffon propre avec très peu de liquide vitre. Toujours bien sécher les parties nettoyées.

1- Safety Instructions




WARNING


Please read the instructions carefully which includes important information about the installation, operation and maintenance.

- Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the fixture.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Disconnect main power before servicing and maintenance.
- Maximum ambient temperature is $T_a : 40^\circ$. Don't operate it where the temperature is higher than this.
- In the event of serious operating problem, stop using the fixture immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. There are no user serviceable parts inside the fixture.
- Do not connect the device to any dimmer pack.
- To prevent or reduce the risk of electrical shock or fire, do not expose the fixture to rain or moisture.
- Do not look directly at the LED light beam while the fixture is on.
- Do not touch any wire during operation.
- The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.
- The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.

2- Unit Description

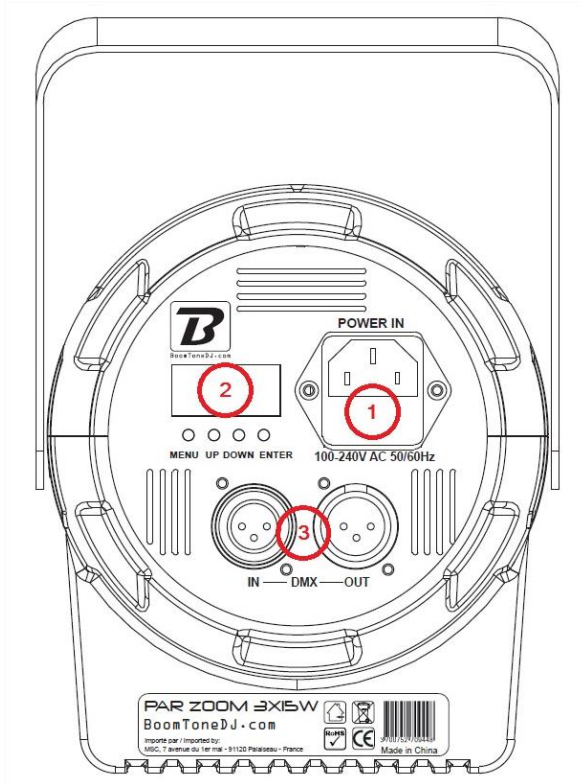

- 1) Power connector
- 2) Control panel
- 3) DMX connectors

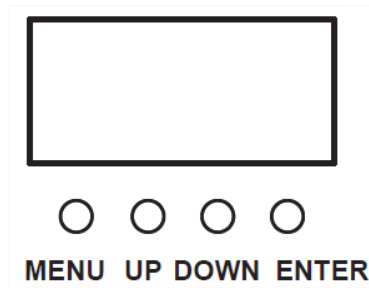

Button:

- | | |
|---------|--------------------------------|
| 1.MENU | To select the program function |
| 2.UP | Increase parameter |
| 3.DOWN | Reduce parameter |
| 4.ENTER | Enter submenu |

Note:(1) In about 10 seconds, if no buttons was pressed, the LED display will be off.
Press any button to turn the display on again.

(2)After pressing a button, all the parameters will be saved after about 2 seconds .

3- Technical Specifications

- **Light Sources:** 3x 15W 4in1 RGBW LED
- Beam Angle: 6.5°-60°
- Power Consumption: 50W
- Power Voltage: AC 100-240V, 50/60Hz
- Dimension: 140x140x160mm
- Net Weight: 3 kg ; Gross Weight: 3.5 kg
- **Control**
DMX Channel: 8/12Channel
Control Modes: DMX512/Auto Run/Master-Slaver/Music mode
- **Construction**
Display: Digital Display
Data In/Out socket: 3-pin & 5-pin XLR sockets
Power Socket: IEC socket
Protection Rating: IP20
- **Features**
Motorized liner zoom system, zoom range: 6.5°-60°
Dimmer: 0~100% smooth dimming
Fast, quiet operation and flicker free

This BoomToneDJ fixture is complying with European standards: EN 2014/30/EU, EN 2011/65/EU, EN 2014/35/EU.

4- Menu

Addr	001-512	Set DMX address
ChAn	8	CH 8 mode
	12	CH 12 Mode
Mode	Dmx	DMX mode
	Fast	Fast speed
	Slow	Slow speed
	Soun	Music mode
MAnL	rED	Red color
	GrEE	Green color
	BLUE	Blue color
	Whit	White color
	zoom	Zoom function
Sens	SE0-SE99	Set Mic Sensitivity
bALA	rED	Red color
	GrEE	Green color
	BLUE	Blue color
	Whit	White color
DEFA	YES	Factory Default
REST	YES	Reset

A. By Master/Slave built-in program function.

By linking the units in master/slave connection, the first unit will control the other units to give an automatic, sound activated, synchronized light show. This function is good when you want an instant show. You have to set the first unit in Automatic, sound activated mode. Its DMX input jack will have nothing plugged into it. The other units will have to select **SLA** , Their DMX cables plugged into the DMX input jacks (daisy chain) and the slave led lights will constantly on.

B. By universal DMX controller

Using universal DMX controller to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.

Press the MENU, then find Addr, press ENTER, when the 1 is showing on the display. Pressing ENTER. Use DOWN and UP button change the DMX512 address.

DMX Protocole 12 channels:


CH	Function	Detail
1	Dimmer	0-255 :0-100% dimming
2	Strobe	1-255; Strobe, from slow to fast
3	Zoom	0-255 : Zoom adjustment, from big to small
4	R Dimmer	0-255; 0-100% Red dimming
5	G Dimmer	0-255; 0-100% Green dimming
6	B Dimmer	0-255; 0-100% Blue dimming
7	W Dimmer	0-255; 0-100% White dimming
8	Color changing	0-10, Enable other channels
		11-127, Color changing
		128-160,Color jump changing
		161-200,Color gradual changing 1
		201-255,Color gradual changing 2
9	Speed of color changing	Color jump change, fade, set the speed of CH8
10	Built-in effect	0-10,Enable other channels
		11-120,Built-in effect fast run
		121-244,Built-in effect slow run
		245-255,Music mode
11	Built-in effect speed set	Built-in effect speed adjustable
12	Reset	150-200 Reset

DMX Protocole 8 channels:

CH	Function	Detail
1	Dimmer	0-255 :0-100% dimming
2	Strobe	1-255; Strobe, from slow to fast
3	Zoom	0-255 : Zoom adjustment, from big to small
4	R Dimmer	0-255; 0-100% dimming
5	G Dimmer	0-255; 0-100% Red dimming
6	B Dimmer	0-255; 0-100% Green dimming
7	W Dimmer	0-255; 0-100% Blue dimming
8	Reset	150-200 Reset

5. DMX 512 Connection

The DMX 512 is widely used in intelligent lightings and with a maximum of 512 channels.

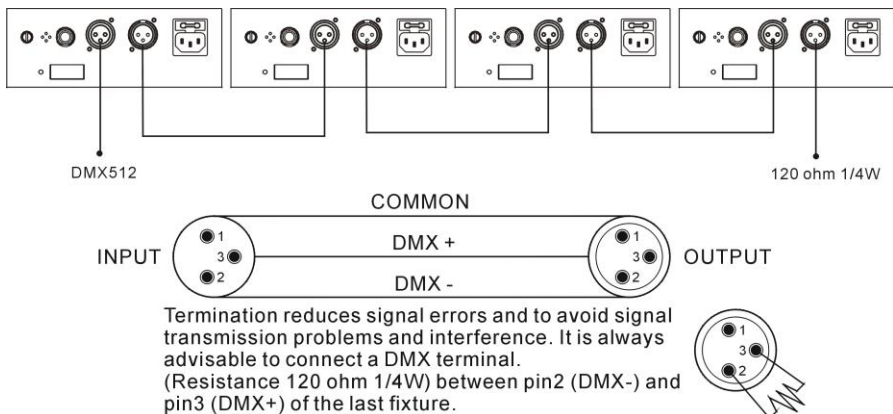

1. If you using a controller with 5 pins DMX output, you need to use a 5 to 3 pin adapter-cable.
2. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120 ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
3. Connect the unit together in a 'daisy chain' by XLR plug from the output of the unit to the input of the next unit. The cable cannot be branched or split to a 'Y' cable. DMX512 is a very high-speed signal. Inadequate or damaged cables, solder joints or corroded connectors can

easily distort the signal and shut down the system.

4. Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).

Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

- **The fixture does not work, no light**
 - Check the connection of power and main fuse.
 - Measure the mains voltage on the main connector.
- **Not responding to DMX controller**
 - DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
 - If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
 - If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the fixture or the previous one.
 - Try to use another DMX controller.
 - Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.
- **Some fixtures don't respond to the easy controller**
 - You may have a break in the DMX cabling.
 - Check the LED for the response of the master/ slave mode signal.
- **No response to the sound**
 - Make sure the fixture does not receive DMX signal.
 - Check microphone to see if it is good by tapping the microphone.

6. Fixture Cleaning

The cleaning of internal must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days

 **BoomToneDJ.com**

⋮ www.boomtonedj.com

Importé par / Imported by
BoomtoneDJ – MSC
7 avenue du 1er Mai
91120 Palaiseau / FRANCE
infos@msc-distribution.com
Tel : +33 1 69 34 80 62